

***lenovo***



L2230x Wide USB Port Replicator Monitor  
User's Manual

LENOVO (BEIJING) LIMITED

# Product Numbers

5453-HB1

First Edition ( April 2010)

© Copyright Lenovo 2010.

LENOVO products, data, computer software, and services have been developed exclusively at private expense and are sold to governmental entities as commercial items as defined by 48 C.F.R. 2.101 with limited and restricted rights to use, reproduction and disclosure.

LIMITED AND RESTRICTED RIGHTS NOTICE: If products, data, computer software, or services are delivered pursuant a General Services Administration "GSA" contract, use, reproduction, or disclosure is subject to restrictions set forth in Contract No. GS-35F-05925.

---

# Contents

|  |            |
|--|------------|
| <b>Safety information</b> .....  | <b>iii</b> |
| <b>Chapter 1. Getting started</b> .....                                      | <b>1-1</b> |
| Shipping contents .....  | 1-1        |
| Attaching the base and handling your monitor .....                           | 1-1        |
| Product overview .....   | 1-2        |
| Types of adjustments .....   | 1-2        |
| User controls .....  | 1-2        |
| Cable lock slot .....  | 1-3        |
| Setting up your monitor .....  | 1-3        |
| Connecting and turning on your monitor .....                                 | 1-3        |
| Registering your option .....  | 1-5        |
| <b>Chapter 2. Adjusting and using your monitor</b> .....                     | <b>2-1</b> |
| Comfort and accessibility .....  | 2-1        |
| Arranging your work area .....   | 2-1        |
| Positioning and viewing your monitor .....                                   | 2-1        |
| Quick tips for healthy work habits .....                                     | 2-2        |
| Accessibility information .....  | 2-2        |
| Adjusting your monitor image .....   | 2-3        |
| Using the direct access controls .....                                       | 2-3        |
| Using the On-Screen Display (OSD) controls .....                             | 2-3        |
| Selecting a supported display mode .....                                     | 2-6        |
| Understanding power management .....   | 2-7        |
| Caring for your monitor .....  | 2-8        |
| Detaching the monitor stand .....  | 2-8        |
| <b>Chapter 3. Reference information</b> .....                                | <b>3-1</b> |
| Monitor specifications .....   | 3-1        |
| Troubleshooting .....  | 3-3        |
| Manual image setup .....   | 3-4        |
| Manually installing the monitor driver .....                                 | 3-5        |
| Installing the device driver in Windows 7 .....                              | 3-6        |
| Installing the device driver in Windows Vista .....                          | 3-6        |
| Installing the monitor driver in Windows XP .....                            | 3-7        |
| Service information .....  | 3-8        |
| <b>Chapter 4. Working with L2230x Wide USB Port Replicator Monitor</b> ..... | <b>4-1</b> |
| Connect the USB Port Replicator for the monitor .....                        | 4-1        |
| Using the audio connectors .....   | 4-1        |
| Using the USB 2.0 connectors .....   | 4-2        |
| Using the Ethernet connector .....   | 4-2        |
| Using Digital (USB) Video .....  | 4-2        |
| Troubleshooting .....  | 4-4        |
| <b>Chapter 5. Read me</b> .....  | <b>5-1</b> |
| <b>Appendix A. Service and Support</b> .....                                 | <b>A-1</b> |
| <b>Appendix B. Notices</b> .....   | <b>B-1</b> |
| Trademarks .....   | B-2        |

---

## Safety information

### General Safety guidelines

For tips to help you use your computer safely, go to:  
<http://www.lenovo.com/safety>

**Before installing this product, read the Safety Information.**

Avant d'installer ce produit, lisez les consignes de sécurité.

Vor der Installation dieses Produkts die Sicherheitshinweise lesen.

Πριν εγκαταστήσετε το προϊόν αυτό, διαβάστε τις πληροφορίες ασφαλείας (safety information).

לפני שתתקינו מוצר זה, קראו את הוראות הבטיחות.

A termék telepítése előtt olvassa el a Biztonsági előírásokat!

Prima di installare questo prodotto, leggere le Informazioni sulla Sicurezza

Antes de instalar este produto, leia as Informações de Segurança.

Läs säkerhetsinformationen innan du installerar den här produkten.

Prije instalacije ovog produkta obavezno pročitajte Sigurnosne Upute.

Les sikkerhetsinformasjonen (Safety Information) før du installerer dette produktet.

Przed zainstalowaniem tego produktu, należy zapoznać się z książką "Informacje dotyczące bezpieczeństwa" (Safety Information).

Пред да се инсталира овој продукт, прочитајте информацијата за безбедност.

Pred inštaláciou tohto zariadenia si peôítajte Bezpeônostné predpisy.

Pred namestitvijo tega proizvoda preberite Varnostne informacije.

Ennen kuin asennat t m n tuotteen, lue turvaohjeet kohdasta Safety Information.

Před instalac tohoto produktu si přečtête příručku bezpečnostních instrukcí

在安装本产品之前，请仔细阅读 Safety Information (安全信息)。

安裝本產品之前，請先閱讀「安全資訊」。

مج، يجب قراءة دات السلامة

Les sikkerhedsforskrifterne, før du installerer dette produkt.

製品の設置の前に、安全情報をお読みください。

본 제품을 설치하기 전에 안전 정보를 읽으십시오.

Antes de instalar este producto lea la información de seguridad.

Antes de instalar este produto, leia as Informações de Segurança.

Перед установкой продукта прочтите инструкции по технике безопасности.

Lees voordat u dit product installeert eerst de veiligheidsvoorschriften.

---

## Chapter 1. Getting started

This User's Guide contains detailed information on the your Flat Panel Monitor. For a quick overview, please see the Setup Poster that was shipped with your monitor.

---

### Shipping contents

The product package should include the following items:

- *Setup Poster*
- *Warranty Card*
- *Reference and Driver CD*
- *Flat Panel Monitor*
- *Analog Interface Cable*
- *Power Cord*
- *USB Cable*




---

### Attaching the base and handling your monitor

To set up your monitor, please see the illustrations below.

**Note:** Do not touch the monitor within the screen area. The screen area is glass and can be damaged by rough handling or excessive pressure.

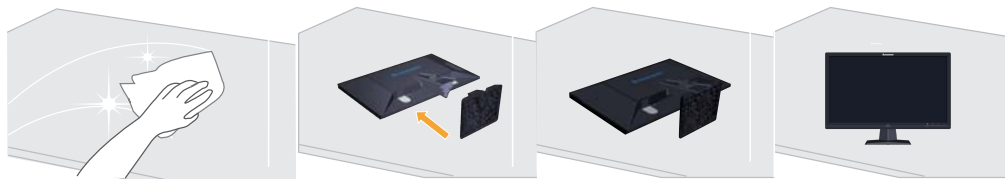


---

## Product overview

This section will provide information on adjusting monitor positions, setting user controls, and using the cable lock slot.


### Types of adjustments

Please see the illustration below for an example of the tilt range.

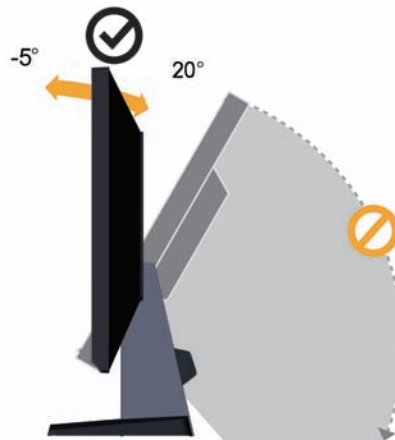

### User controls

Your monitor has controls on the front which are used to adjust the display.

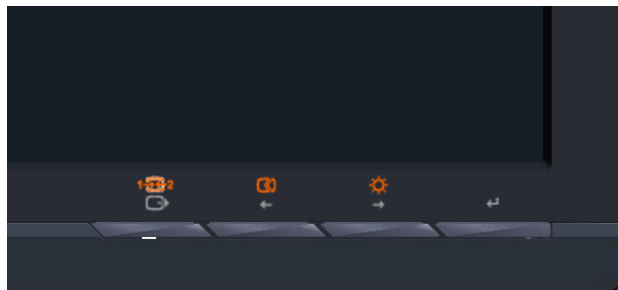

For information on how to use these controls, please see “Adjusting your monitor image” on page 2-3.

## Cable lock slot

Your monitor is equipped with a cable lock slot located on the rear of your monitor (in the lower position). Please see the instructions that come with the cable lock to learn how to attach it.



---

## Setting up your monitor

This section provides information on how to set up your monitor.

### Connecting and turning on your monitor


**Note:** Be sure to read the Safety Information located on the page iii before carrying out this procedure.

1. Power off your computer and all attached devices, and unplug the computer power cord.




2. Connect the analog signal cable to the video port on the back of the computer.


**Note:** The other end of signal cable to your monitor connector

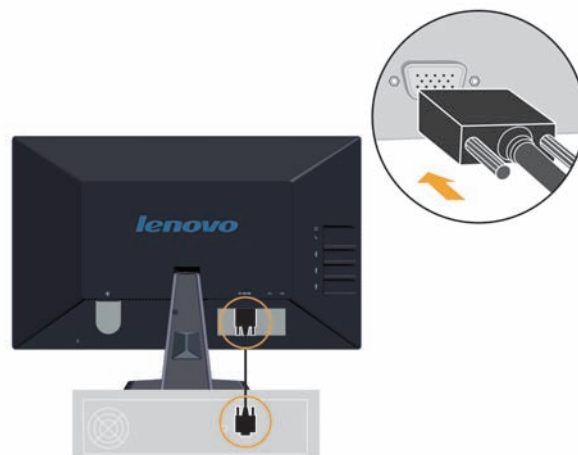

3. Connect the USB cable to the upstream USB port of the back of the monitor and the other end to an appropriate USB port on your computer. How to work with L2230x Wide USB Port Replicator Monitor, please see "Chapter 4".

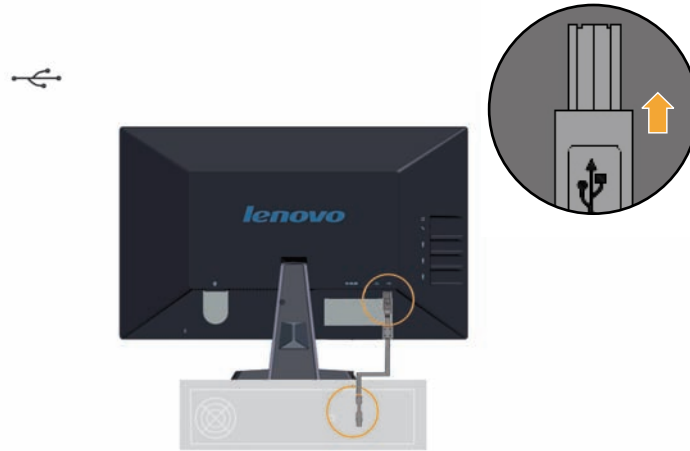

4. Plug the monitor power cord and the computer cord into grounded electrical outlets.

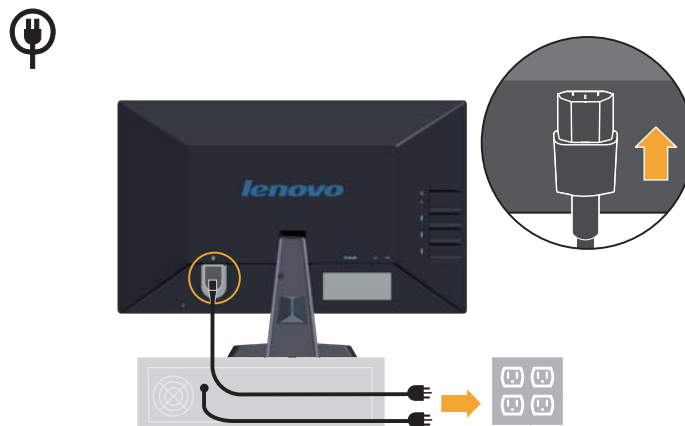


5. Power on the monitor and the computer.





6. To install the monitor driver, insert the *Reference and Driver CD*, click **Install driver**, and follow the on-screen instructions.

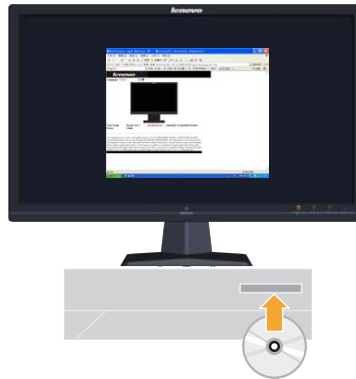

7. To optimize your monitor image, press the Automatic Image Setup key. Automatic image setup requires that the monitor is warmed up for at least 15 minutes. This is not required for normal operation.



**Note:** If automatic image setup does not establish the image that you prefer, perform manual image setup. See “Manual image setup” on page 3-4 .

---

## Registering your option

Thank you for purchasing this Lenovo™ product. Please take a few moments to register your Product and provide us with information that will help Lenovo to better serve you in the future. Your feedback is valuable to us in developing product and services that are important to you, as well as in developing better ways to communicate with you. Register your option on the following Web site:

<http://www.lenovo.com/register>

Lenovo will send you information and updates on your registered product unless you indicate on the Web site questionnaire that you do not want to receive further information.

---

## Chapter 2. Adjusting and using your monitor

This section will give you information on adjusting and using your monitor.

---

### Comfort and accessibility

Good ergonomic practice is important to get the most from your personal computer and to avoid discomfort. Arrange your workplace and the equipment you use to suit your individual needs and the kind of work that you perform. In addition, use healthy work habits to maximize your performance and comfort while using your computer. For more detailed information on any of these topics, visit the Healthy Computing Web site at: <http://www.lenovo.com/healthycomputing/>.

### Arranging your work area

Use a work surface of appropriate height and available working area to allow you to work in comfort.

Organize your work area to match the way you use materials and equipment. Keep your work area clean and clear for the materials that you typically use and place the items that you use most frequently, such as the computer mouse or telephone, within the easiest reach.

Equipment layout and setup play a large role in your working posture. The following topics describe how to optimize equipment setup to achieve and maintain good working posture.

### Positioning and viewing your monitor

Position and adjust your computer monitor for comfortable viewing by considering the following items:

- **Viewing distance:** Optimal viewing distances for monitors range from approximately 510mm to 760mm (20 in to 30 in) and can vary depending on ambient light and time of day. You can achieve different viewing distances by repositioning your monitor or by modifying your posture or chair position. Use a viewing distance that is most comfortable for you.
- **Monitor height:** Position the monitor so your head and neck are in a comfortable and neutral (vertical, or upright) position. If your monitor does not have height adjustments, you might have to place books or other sturdy objects under the base of the monitor to achieve the desired height. A general guideline is to position the monitor such that the top of the screen is at or slightly below your eye-height when you are comfortably seated. However, be sure to optimize your monitor height so the line of site between your eyes and the center the monitor suits your preferences for visual distance and comfortable viewing when your eye muscles are in a relaxed state.
- **Tilt:** Adjust the tilt of your monitor to optimize the appearance of the screen content and to accommodate your preferred head and neck posture.
- **General location:** Position your monitor to avoid glare or reflections on the screen from overhead lighting or nearby windows.

The following are some other tips for comfortable viewing of your monitor:

- Use adequate lighting for the type of work you are performing.

- Use the monitor brightness, contrast, and image adjustment controls, if equipped, to optimize the image on your screen to meet your visual preferences.
- Keep your monitor screen clean so you can focus on the screen's contents.

Any concentrated and sustained visual activity can be tiring for your eyes. Be sure to periodically look away from your monitor screen and focus on a far object to allow your eye muscles to relax. If you have questions on eye fatigue or visual discomfort, consult a vision care specialist for advice.

## Quick tips for healthy work habits

The following information is a summary of some important factors to consider to help you remain comfortable and productive while you use your computer.

- **Good posture starts with equipment setup:** The layout of your work area and the setup of your computer equipment have a large effect on your posture while using your computer. Be sure to optimize the position and orientation of your equipment by following the tips outlined in "Arranging your work area" on page 2-1 so you can maintain a comfortable and productive posture. Also, be sure to use the adjustment capabilities of your computer components and office furniture to best suit your preferences now and as your preferences change over time.
- **Minor changes in posture can help avoid discomfort:** The longer you sit and work with your computer, the more important it is to observe your working posture. Avoid assuming any one posture for an extended period of time. Periodically make minor modifications in your posture to help deter any discomforts that might arise. Make use of any adjustments that your office furniture or equipment provide to accommodate changes in posture
- **Short, periodic breaks help ensure healthy computing:** Because computing is primarily a static activity, it is particularly important to take short breaks from your work. Periodically, stand up from your work area, stretch, walk for a drink of water, or otherwise take a short break from using your computer. A short break from work gives your body a welcome change in posture and helps to ensure you remain comfortable and productive while you do work.

## Accessibility information

Lenovo is committed to providing greater access to information and technology to people with disabilities. With assistive technologies, users can access information in the way most appropriate to their disability. Some of these technologies are already provided in your operating system; others can be purchased through vendors or accessed at:

<http://www03.ibm.com/research/accessibility/requests/accvpat.nsf/lenovo-bidx?OpenForm>

---




## Adjusting your monitor image

This section describes the user control features for adjusting your monitor image.

### Using the direct access controls


The direct access controls can be used when the On Screen Display (OSD) is not displayed.

Table 2-1. Direct access controls

| Icon  | Control      | Description                             |
|---|--------------|---|
|  | Input Change | Switches the video input source.        |
|  | Image Setup  | Activates automatic image adjustment.   |
|  | Brightness   | Direct access to Brightness adjustment. |

### Using the On-Screen Display (OSD) controls

To adjust the settings, the user controls can be viewed through the OSD.

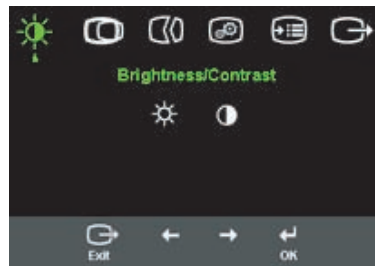

To use the controls:

1. Press **↵** to open the main OSD menu.
2. Use **←** or **→** to move among the icons. Select an icon and press **↵** to access that function. If there is a sub-menu, you can move between options using **←** or **→**, then press **↵** to select that function. Use **←** or **→** to make adjustments. Press **↵** to save.
3. Press **↶** to move backwards through the sub-menus and exit from the OSD.
4. Press and hold **↵** for 10 seconds to lock the OSD. This will prevent accidental adjustments to the OSD. Press and hold **↵** for 10 seconds to unlock the OSD and allow adjustments to the OSD.
5. Enables DDC/CI by default. Use OSD Exit Key, Press and hold the **↶** buttons for 5 seconds to disable / enable DDC/CI function. The words "DDC/CI disable" shows on the screen.

Table 2-2. OSD functions




















 











| OSD Icon on Main Menu  | Submenu  | Description  | Controls and Adjustments (Analog)   |   | Controls and Adjustments (Digital)               |
|--|--|--|---|---|--|
| <br>Brightness/<br>Contrast | <br>Brightness          | Adjusts overall screen brightness  |  |  | Same as Analog                                   |
|  | <br>Contrast            | Adjusts difference between light and dark areas  |  |  |  |
| <br>Image Position          | <br>Horizontal Position | Moves screen image left or right.  |  |  | Controls Locked - not required for digital input |
|  | <br>Vertical Position   | Moves screen image up or down.   |  |  |  |
| <br>Image Setup             | <br>Automatic           | Optimizes image (size,position,phase and clock).   |   |   |  |
|  | <br>Manual              | Manually optimizes screen image. See "Manual image setup" on page 3-4. <ul style="list-style-type: none"> <li>• Clock</li> <li>• Phase</li> <li>• Save</li> </ul>  |   |   |  |
| <br>Image Properties      | <br>Color             | Adjusts intensity of red, green, and blue.<br>Preset mode <ul style="list-style-type: none"> <li>• Neutral</li> <li>• sRGB</li> <li>• Reddish</li> <li>• Bluish</li> </ul> Custom <ul style="list-style-type: none"> <li>• Red: Increases or decreases the saturation of 'red' in the image.</li> <li>• Green: Increases or decreases the saturation of 'green' in the image.</li> <li>• Blue: Increases or decreases the saturation of 'blue' in the image.</li> <li>• Save: Saves the custom color choices.</li> </ul> |   |   | Same as Analog                                   |

Table 2-2. OSD functions

| OSD Icon on Main Menu  | Submenu   | Description   | Controls and Adjustments (Analog) | Controls and Adjustments (Digital) |
|--|---|---|-----------------------------------|------------------------------------|
|  | <br>Input video signal | This monitor can accept video signals through two different connectors. Most desktop computers use a D-SUB connector. When current source in USB and switch source to USB, it is Toggle Key of the Extend mode and the Mirror mode.<br>- Selects D-SUB (Analog)<br>- Selects USB(Digital)<br>The Extend mode and the Mirror mode can be changed circularly by selecting this icon.<br>                     |                                   | Same as Analog                     |
|  | <br>Scaling            | <ul style="list-style-type: none"> <li>Selects type of scaled image</li> <li>Original AR:same aspect ratio with input signal</li> <li>Full Screen :expand image to full screen</li> </ul>   |                                   |                                    |
| <br>Options | <br>Information        | Shows resolution, refresh rate, and product details.<br><b>Note:</b> This screen does not allow any changes to the settings.  |                                   | Same as Analog                     |
|  | <br>Menu Language      | This section lists the languages supported by your monitor.<br><b>Note:</b> The language chosen only affects the language of the OSD. It has no effect on any software running on the computer.   |                                   |                                    |
|  | <br>Menu Position    | Menu position adjusts menu location on the screen.<br>Default:<br>Default returns the menu position to the default settings.<br>Custom: <ul style="list-style-type: none"> <li>Horizontal: Changes the horizontal position of the OSD.</li> <li>Vertical: Changes the vertical position of the OSD.</li> <li>Save</li> </ul>  |                                   |                                    |
|  | <br>Reset            | <ul style="list-style-type: none"> <li>Cancel</li> <li>Reset</li> </ul> Resets monitor to the original factory settings.  |                                   |                                    |
|  | <br>Accessibility    | Controls button and menu settings for accessibility preferences.<br> Button repeat rate:<br>Select ← or → to change. <ul style="list-style-type: none"> <li>Off</li> <li>Default</li> <li>Slow</li> </ul>  Menu time out: Sets the length of time the OSD will remain active after the last time a button is pressed. |                                   |                                    |
| <br>Exit  |   | Exit from menu.   |                                   |                                    |

---

## Selecting a supported display mode

The display mode the monitor uses is controlled by the computer. Therefore, refer to your computer documentation for details on how to change display modes.

The image size, position and shape might change when the display mode changes. This is normal and the image can be readjusted using automatic image setup and the image controls.

Unlike CRT monitors, which require a high refresh rate to minimize flicker, LCD or Flat Panel technology is inherently flicker-free.

**Note:** If your system has previously been used with a CRT monitor and is currently configured to a display mode outside the range of this monitor, you may need to re-attach the CRT monitor temporarily until you have re-configured the system; preferably to 1920 x 1080 at 60 Hz, which is the Native Resolution Display mode.

The display modes shown below have been optimized at the factory.

*Table 2-3. Factory set display modes*

| Addressability | Refresh rate              |
|----------------|---------------------------|
| 640 x 350      | 70 Hz                     |
| 640 x 500      | 58 Hz                     |
| 640 x 480      | 60Hz , 66Hz , 72Hz , 75Hz |
| 720 x 400      | 70Hz                      |
| 800 x 600      | 56Hz , 60Hz , 72Hz , 75Hz |
| 1024 x 768     | 60Hz , 70Hz , 75Hz        |
| 1152 x 864     | 75Hz                      |
| 1280 x 1024    | 60Hz , 70Hz , 72Hz , 75Hz |
| 1360x768       | 60Hz                      |
| 1440x900       | 60Hz,75Hz                 |
| 1680x1050      | 60Hz                      |
| 1920x1080      | 60Hz                      |
| 480p           | 60Hz                      |
| 576p           | 50Hz                      |
| 720p           | 50Hz,60Hz                 |
| 1080p          | 50Hz,60Hz                 |

---

## Understanding power management

Power management is invoked when the computer recognizes that you have not used your mouse or keyboard for a user-definable period. There are several states as described in the table below.

For optimal performance, switch off your monitor at the end of each working day, or whenever you expect to leave it unused for long periods during the day.

Table 2-4. Power indicator

| State           | Power Indicator | Screen | Restoring Operation  | Compliance  |
|-----------------|-----------------|--------|--|-------------|
| On              | green           | Normal |  |             |
| Standby/Suspend | Amber           | Blank  | Press a key or move the mouse<br><br>There may be a slight delay before the image reappears.<br><br><b>Note:</b> Standby also occurs if there is no image output to the monitor. | ENERGY STAR |
| Off             | Off             | Blank  |  | ENERGY STAR |



---

## Caring for your monitor

Be sure to turn off the power before you perform any maintenance on the monitor.

**Do not:**

- Apply water or liquid directly to your monitor.
- Use solvents or abrasives.
- Use flammable cleaning materials to clean your monitor or any other electrical equipment.
- Touch the screen area of your monitor with sharp or abrasive items. This type of contact may cause permanent damage to your screen.
- Use any cleaner which contains an anti-static solution or similar additives. This may harm the coating of the screen area.


**Do:**

- Lightly dampen a soft cloth with water and use this to gently wipe the covers and the screen.
- Remove grease or finger marks with a damp cloth and a little mild detergent.

---

## Detaching the monitor base

Pressing the button then push the base down, and base could be detached.

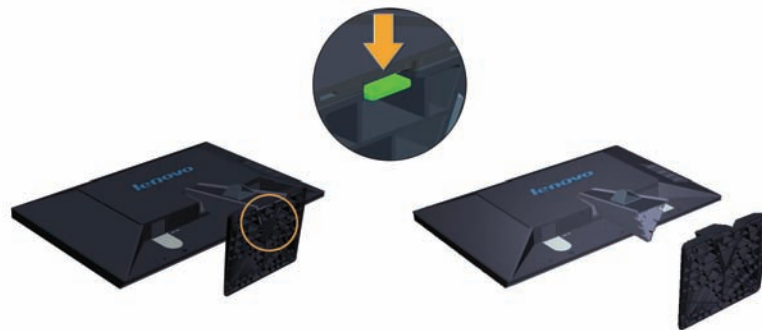

## Chapter 3. Reference information

This section contains monitor specifications, instructions to manually install the monitor driver, troubleshooting information, and service information.

### Monitor specifications

Table 3-1. Monitor specifications for L2230x Wide USB Port Replicator Monitor

|  |                           |                                     |
|--|---------------------------|-------------------------------------|
| Dimensions   | Height                    | 376.27 mm (14.81 in.)               |
|  | Depth                     | 152.45 mm (6.00 in.)                |
|  | Width                     | 512.25 mm (20.17 in.)               |
| Stand  | Tilt                      | Range: -5°, +20°                    |
| VESA mount   | Supported                 | 75 mm (2.95 in.)                    |
| Image  | Viewable image size       | 546.86 mm (21.53 in.) <sup>②③</sup> |
|  | Maximum height            | 476.64 mm (18.77 in.) <sup>②③</sup> |
|  | Maximum width             | 268.11 mm (10.56 in.) <sup>②③</sup> |
|  | Pixel pitch               | 0.248 mm (0.01 in.)                 |
| Power input  | Supply voltage            | 90-264VAC (100~240VAC+/-10%)        |
|  | Max supply current        | 1.5 A                               |
| Power consumption<br><b>Note:</b> Power consumption figures are for the monitor and the power supply combined. | Normal operation          | < 43 W (with USB)                   |
|  | Standby/Suspend           | < 1W                                |
|  | Off                       | < 0.5W at 100Vac & 240Vac           |
| Video input (Analog)   | Input signal              | Analog Direct Drive, 75 ohm 0.7 V   |
|  | Horizontal addressability | 1920 pixels (max)                   |
|  | Vertical addressability   | 1080 lines (max)                    |
|  | Clock frequency           | 210 MHz                             |
| Video input (Digital)  | Interface                 | USB                                 |
|  | Input Signal              | VESA TMDS (Panel Link™)             |
|  | Horizontal addressability | 1920 pixels (max)                   |
|  | Vertical addressability   | 1080 lines (max)                    |
|  | Clock frequency           | 165 MHz                             |

*Table 3-1. Monitor specifications for L2230x Wide USB Port Replicator Monitor*

| Communications   | VESA DDC             | DDC-CI                        |
|--|----------------------|-------------------------------|
| Supported Display Modes<br>(VESA Standard modes<br>between noted ranges) | Horizontal frequency | 30 kHz - 83 kHz               |
|  | Vertical frequency   | 50 Hz - 75 Hz                 |
|  | Native Resolution    | 1920 x 1080 at 60 Hz          |
| Temperature  | Operating            | 0° to 40° C (32° to 113° F)   |
|  | Storage              | -20° to 60° C (-4° to 140° F) |
|  | Shipping             | -20° to 60° C (-4° to 140° F) |
| Humidity   | Operating            | 10% to 80%                    |
|  | Storage              | 5% to 95%                     |
|  | Shipping             | 5% to 95%                     |

## Troubleshooting

If you have a problem setting up or using your monitor, you might be able to solve it yourself. Before calling your dealer or Lenovo, try the suggested actions that are appropriate to your problem.

Table 3-2. Troubleshooting

| Problem  | Possible cause   | Suggested action   | Reference  |
|--|--|--|--|
| The words "Out of Range" are shown on the screen, and the power indicator is flashing green. | The system is set to a display mode which is not supported by the monitor.   | <p>If you are replacing an old monitor, reconnect it and adjust the display mode to within the specified range for your new monitor.</p> <p>If using a Windows system, restart the system in safe mode, then select a supported display mode for your computer.</p> <p>If these options do not work, contact the Support Center.</p> | "Selecting a supported display mode" on page 2-6     |
| The image quality is unacceptable.   | The video signal cable is not connected with the monitor or system completely.   | Be sure the signal cable is firmly plugged into the system and monitor.  | "Connecting and turning on your monitor" on page 1-3 |
|  | The color settings may be incorrect.   | Select another color setting from the OSD menu.  | "Adjusting your monitor image" on page 2-3           |
|  | The automatic image setup function was not performed.  | Perform automatic image setup.   | "Adjusting your monitor image" on page 2-3           |
| The power indicator is not lit and there is no image.  | <ul style="list-style-type: none"> <li>The monitor's power switch is not switched on.</li> <li>The power cord is loose or disconnected.</li> <li>There is no power at the outlet.</li> </ul> | <ul style="list-style-type: none"> <li>Be sure the power cord is connected properly.</li> <li>Be sure the outlet has power.</li> <li>Power on the monitor.</li> <li>Try using another power cord.</li> <li>Try using another electrical outlet.</li> </ul>   | "Connecting and turning on your monitor" on page 1-3 |
| Screen is blank and power indicator is steady amber or flashing green                        | The monitor is in Standby/Suspend mode   | <ul style="list-style-type: none"> <li>Press any key on the keyboard or move the mouse to restore operation.</li> <li>Check the Power Options settings on your computer.</li> </ul>  | "Understanding power management" on page 2-7         |

Table 3-2. Troubleshooting

| Problem   | Possible cause  | Suggested action   | Reference  |
|---|---|--|--|
| The power indicator is green, but there is no image.  | The video signal cable is loose or disconnected from the system or monitor.   | Be sure the video cable is connected with the system properly.   | "Connecting and turning on your monitor" on page 1-3               |
|   | The monitor brightness and contrast are at the lowest setting.  | Adjust the brightness and contrast setting on the OSD menu.  | "Adjusting your monitor image" on page 2-3                         |
| One or more of the pixels appear discolored   | This is a characteristic of the LCD technology and is not an LCD defect.  | If there are more than five pixels missing, contact the Support Center.  | Appendix A, "Service and Support," on page A-1                     |
| <ul style="list-style-type: none"> <li>Fuzzy lines in text or a blurry image.</li> <li>Horizontal or vertical lines through the image.</li> </ul> | <ul style="list-style-type: none"> <li>Image setup has not been optimized</li> <li>Your system Display Properties setting have not been optimized.</li> </ul> | Adjust the resolution settings on your system to match the native resolution for this monitor: 1920x 1080 at 60 Hz.                      | "Adjusting your monitor image" on page 2-3<br>"Manual image setup" |
|   |   | Perform automatic image setup. If automatic image setup does not help, perform manual image setup.                                       | "Selecting a supported display mode" on page 2-6                   |
|   |   | When working in the native resolution, you may find additional improvements by adjusting the Dots Per Inch (DPI) setting on your system. | See the Advanced section of your system's display properties.      |

## Manual image setup

If automatic image setup does not establish the image that you prefer, perform manual image setup.

**Note:** Have your monitor powered on for about 15 minutes, until the monitor warms up.

1. Press **↵** at the bottom of the monitor to open the OSD menu.
2. Use **←** or **→** to select **☰** and press **↵** to access.
3. Use **←** or **→** to select **Clock** and **Phase** adjustment.
  - **Clock** (pixel frequency) adjusts the number of pixels scanned by one horizontal sweep. If the frequency is not correct, the screen shows vertical stripes and the picture does not have the correct width.
  - **Phase** adjusts the phase of the pixel clock signal. With a wrong phase adjustment, the picture has horizontal disturbances in light picture.
4. When the image no longer looks distorted, save the Clock and Phase adjustments.
5. Press **⏪** to leave the OSD menu.

## Manually installing the monitor driver

Below are steps for manually installing the monitor driver in Microsoft® Windows XP Microsoft® Windows Vista Microsoft® Windows 7. Please see the Install Driver section of the *Reference and Driver CD* for automatic installation.

### Installing the monitor driver in Windows 7

To use the Plug and Play feature Microsoft Windows 7, do the following:

**Note:** You must download file from the Lenovo Monitor CD to use the Plug and Play feature in Windows 7.

1. Turn off the computer and all attached devices.
2. Ensure that the monitor is connected correctly.
3. Turn on the monitor and then the system unit. Allow your computer to start the Windows 7 operating system.
4. Open the **Display Properties** window by clicking **Start, Control Panel and Hardware and Sound** icon.
5. Click the **Appearance and Personalization** icon.
6. Click the **Display** icon.
7. Click the change **display Settings** button.
8. Click the **Advanced Settings** button.
9. Click the **Monitor** tab.
10. Click the **Properties** button.
11. Click the **Driver** tab.
12. Open the "**Update Driver Software-Generic PnP Monitor**" window by clicking on **Update Driver** and then click the "**Browse my computer for driver software**" button.
13. Select "**Let me pick from a list of device drivers on my computer**".
14. Click the **Have Disk** button. Click on the **Browse** button and navigate to the following directory:  
**X:\Monitor Drivers\Windows 7**  
(where X is the drive letter designator for the CD-ROM drive).
15. Select the "**LEN154D.inf**" file and click the **Open** button. Click the **OK** button.
16. Select **LEN L2230xwA** and click **Next**. The files will be copied from the CD to your hard disk drive.
17. Close all open windows and remove the CD.
18. Restart the system. The system will automatically select the maximum refresh rate and corresponding Color Matching Profiles.

**Note:** On LCD monitors, unlike CRTs, a faster refresh rate does not improve display quality. Lenovo recommends using either 1920 x 1080 at a refresh rate of 60 Hz, or 640 x 480 at a refresh rate of 60 Hz.

## Installing the monitor driver in Windows Vista

To install the device driver in Microsoft® Windows Vista, do the following:

Note: You must download files from the Lenovo Monitor CD to use the Plug and Play feature in Windows Vista.

1. Turn off the computer and all attached devices.
2. Ensure that the monitor is connected correctly.
3. Turn on the monitor and then the system unit. Allow your computer to start the Windows Vista operating system.
4. Open the **Display Properties** window by clicking **Start, Control Panel** and then double-clicking the **Hardware and Sound** icon.
5. Click the **Personalization** icon.
6. Click the **Display Settings** icon.
7. Click the **Advanced Settings** button.
8. Click the **Monitor** tab.
9. Click the **Properties** button.
10. Click the **Driver** tab.
11. Open the "**Update Driver Software-Generic PnP Monitor**" window by clicking on **Update Driver** and then click the "**Browse my computer for driver software**" button.
12. Select "**Let me pick from a list of device drivers on my computer**".
13. Click the **Have Disk** button. Click on the **Browse** button and navigate to the following directory:  
**X:\Monitor Drivers\Windows Vista**  
(where **X** is the drive letter designator for the CD-ROM drive).
14. Select the "**LEN154D.inf**" file and click the **Open** button. Click the **OK** button.
15. Select **LEN L2230xwA** and click **Next**. The files will be copied from the CD to your hard disk drive.
16. Close all open windows and remove the CD.
17. Restart the computer.

The system will automatically select the maximum refresh rate and corresponding Color Matching Profiles.

**Note:** On LCD monitors, unlike CRTs, a faster refresh rate does not improve display quality. recommends using either 1920 x 1080 at a refresh rate of 60 Hz, or 640 x 480 at a refresh rate of 60 Hz..

## Installing the monitor driver in Windows XP

To use the Plug and Play feature in Windows XP, files should be loaded from the *Reference and Driver CD*.

**Note:** This section must be completed before continuing with the Windows XP automatic image setup.

1. Turn off the computer and all attached devices.
2. Ensure that the monitor is connected correctly.
3. Turn on the monitor and then the system unit. Allow the system to boot into Windows XP.
4. Open the **Display Properties** window by clicking **Start** → **Settings** → **Control Panel**, and then double-clicking the **Display** icon.
5. Click the **Settings** tab.
6. Click the **Advanced** button.
7. Click the **Monitor** tab.
8. Click the **Properties** button.
9. Click the **Drivers** tab.
10. Open the **Hardware Update Wizard** window by clicking on **Update Driver**, and then click **Next**.
11. Select **Install from a list or Specific location(Advanced)**, and then click **Next**.
12. Select **“Don't search. I will choose the driver to install”** option, and then click **Next**.
13. Click the **Have Disk** button. Click on the **Browse** button and navigate to the following directory:  
**X:\Monitor Drivers\Windows XP**  
(where **X** is the drive letter designator for the CD-ROM drive).
14. Select the **"LEN154D.inf"** file and click the **Open** button. Click on the **OK** button.
15. Select **LENL2230xwA** and click **Next**. The files will be copied from the CD to your hard disk drive.
16. Close all open windows and remove the CD.
17. Restart the system. The system will automatically select the maximum refresh rate and corresponding Color Matching Profiles.

**Note:** On LCD monitors, unlike CRTs, a faster refresh rate does not improve display quality. Lenovo recommends using either 1920 x 1080 at a refresh rate of 60 Hz, or 640 x 480 at a refresh rate of 60 Hz.



## Service information

### Customer responsibilities

The warranty does not apply to a product which has been damaged due to accident, misuse, abuse, improper installation, usage not in accordance with product specifications and instructions, natural or personal disaster, or unauthorized alterations, repairs or modifications.

The following are examples of misuse or abuse and not covered by warranty:

- Images burned onto the screen of a CRT monitor. Burned image is preventable by utilizing a moving screen saver or power management.
- Physical damage to covers, bezel, base and cables.
- Scratches or punctures on monitor screens.

### Service parts

The following parts are for use by Lenovo service, or Lenovo authorized dealers, to support the customer warranty. Parts are for service use only. The table below shows information for model 5453-HB1.

*Table 3-3.* List of service parts


| FRU part number | Description              | Machine Type Number (MTM) | COLOR          |
|-----------------|--------------------------|---------------------------|----------------|
| 57Y2316         | L2230x Wide-FRU Monitor  | 5453-HB1                  | Business Black |
| 57Y2317         | L2230x Wide-Analog cable | 5453-HB1                  | Business Black |
| 57Y2318         | L2230x Wide-USB cable    | 5453-HB1                  | Business Black |
| 57Y2319         | L2230x Wide-FRU Stand    | 5453-HB1                  | Business Black |

---

## Chapter 4. Working with L2230x Wide USB Port Replicator Monitor

### Connect the USB Port Replicator for the monitor

1. Be sure to install the **USB Port Replicator driver for L2230x Wide USB Port Replicator monitor** on your computer. The driver name is "Usb\_PR\_Setup.exe".
2. Plug L2230x Wide USB Port Replicator monitor power cord, and power on L2230x Wide USB Port Replicator Monitor.
3. Connect the USB B plug of the USB cable to the USB B receptacle connector on L2230x Wide USB Port Replicator monitor.
4. Connect the USB A plug of the USB cable to an available USB connector on the computer.

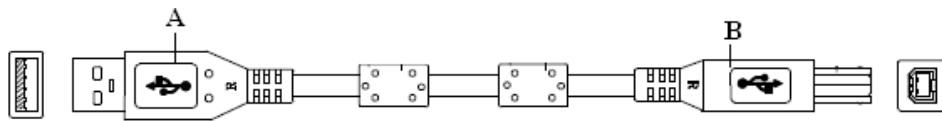

The system will automatically identify and configure the port replicator for L2230x Wide USB Port Replicator monitor. Then you can connect devices to the appropriate connectors on the monitor. Normally it will take some time for the computer to recognize the new device.

**Note:** The settings you have configured for the port replicator will be retained each time you connect the computer to the port replicator. This feature is useful when you use your computer with multiple port replicators. For example, if you use a computer both at home and at work, you can set up both work areas with port replicators. Then, you just connect your computer to the port replicator at either location, and you are ready to work.

### Using the audio connectors

The audio connectors on L2230x Wide USB Port Replicator monitor consists of one microphone connector (red) and one headphone connector (green). The audio connectors are automatically enabled when you have successfully connected the port replicator of L2230x Wide USB Port Replicator monitor and installed the device driver. However, if you can not hear anything from the headphones or speakers connected to the audio connectors, you can manually enable the audio connectors on the port replicator,do the following:

1. Click L2230x Wide USB Port Replicator Monitor icon in the taskbar notification area.
2. Select **Audio**. For Windows XP users, the **Sound and Audio Devices Properties window** opens. For Windows Vista and Windows 7 users, the **Sound window opens**.
3. Depending on the operating system you are using, do one of the following:

**For the Windows XP operating system:**

- a. Click the **Audio** tab.
- b. Select a USB audio line-out device from the **Sound playback** list, and select a USB audio line-in device from the **Sound Recording** list.
- c. If you can not use USB microphone connector (red) , you can Click “ **Test hardware(T)**” on the **Audio** tab.

**For the Windows Vista or Windows 7 operating system:**

Click the **Playback** tab to select a USB audio line-out device and click the **Sound Recording** tab to select a USB audio line-in device.

**Using the USB 2.0 connectors**

Connect a USB device to any of the three USB connectors on the monitor with a USB cable. When the device is correctly connected to the USB connector on the monitor, an information window will be displayed in the taskbar notification area on your computer screen, indicating that the USB device has been connected to the system.

**Using the Ethernet connector**

Connect a standard 10 Mbps / 100 Mbps Ethernet connector to the Ethernet connector on the monitor, and wait until the device is fully configured by the Windows operating system.

**Using Digital (USB) Video**

1. L2230x Wide USB Port Replicator monitor can work in two video modes:  
Extend mode and Mirror mode

**a. Extend mode**

The Extend mode splits your display across multiple monitors. There are two options when using the Extend mode:

- (1) System -Primary: In this mode, your computer display will be the primary display and L2230x Wide USB Port Replicator monitor will be the secondary display.
- (2) Second Display -Primary: In this mode, L2230x Wide USB Port Replicator Monitor Extend mode and monitor will be the primary display and your computer display will be the secondary display.

**b. The Mirror mode** clones your computer screen to the monitor. The port replicator automatically selects the settings (screen resolution, color quality, and refresh rate) for the external monitor, which will enable the best resolution based on your computer settings.

2. To switch between the Extend mode and the Mirror mode, you can press OSD source key of L2230x Wide USB Port Replicator monitor. It takes a few seconds to switch between the Extend mode and the Mirror mode. During the transition, the display indicators will alternatively turn on and off until the port replicator finishes configuring the selected mode. You can wait until the new settings take effect and decide whether to modify the video settings or not.

To switch the video output modes, also depending on the operating system you are using, do one of the following:

**For the Windows XP or Windows Vista operating system:**

- a. Click L2230x Wide USB Port Replicator Monitor icon in the taskbar notification area. The pop-up menu opens.
- b. Select **Extend** or **Mirror**.

**Note:** If you are to use the Extend mode, decide which monitor you are to set as primary and which the secondary. Then, select "**System -Primary**" or "**Second Display -Primary**."

**For the Windows 7 operating system:**

- a. Click L2230x Wide USB Port Replicator Monitor icon in the taskbar notification area.
- b. Select **Advanced Display Settings**.
- c. In the **Multiply displays** drop-down list box, you can select **duplicate these displays to mirror mode** and select **extend these displays** to extend mode.

**Note:** You can also select **show desktop only on 1** or **show desktop only on 2 to display** your desktop only on one target screen.

3. Setting the resolution of the external monitor

In the Mirror mode, you can adjust the resolution of your computer display, and the settings will apply to both your computer display and the external monitor. In the Extend mode, you can set the resolution of the external monitor.

To set the resolution of the external monitor, depending on the operating system you are using, do one of the following:

**For the Windows XP or Windows Vista operating system:**

- a. Click L2230x Wide USB Port Replicator Monitor icon in the taskbar notification area. The pop-up menu opens.
- b. Select **Resolution** and select one of the options for the external monitor.  
For example, "1920 x 1080" means that the video output resolution will be 1920 pixels by 1080 pixels.

**For the Windows 7 operating system:**

- a. Click L2230x Wide USB Port Replicator Monitor icon in the taskbar notification area.
- b. Select **Advanced Display Settings**.

In the **Resolution** drop-down list box, move the slider up to increase or down to decrease the resolution of the external monitor.

4. Disabling the video output function

To disable the video output function of the port replicator, do the following:

- a. Click L2230x Wide USB Port Replicator Monitor icon in the taskbar notification area. The pop-up menu opens.
- b. For Windows XP and Windows Vista users, select **USB Video Off** to disable the video output function of the port replicator. For Windows 7 users, in the Multiple displays drop-down list box, select **show desktop only on 1** or **show desktop only on 2** to display your desktop on one target screen.

## Troubleshooting

### 1. Your computer does not recognize the port replicator of the monitor.

Disconnect the USB cable from your computer, wait at least five seconds, and reinsert it into the USB connector of your computer. If the problem persists, try connecting the USB cable to a different USB connector of your computer.

### 2. The monitor display is blank.

Verify that the computer connected to the port replicator of the monitor is running correctly and is not in Standby or Hibernate mode. Verify that the display drivers are installed following the installation steps and the icon for the port replicator is visible in the taskbar notification area.

Verify that the video output function is not disabled.

Verify the following connections:

The USB 2.0 cable is correctly connected to your computer.

The USB 2.0 cable is correctly connected to the port replicator of the monitor.

If the problem persists, disconnect all connections of the port replicator, uninstall the port replicator device drivers, and then reinstall the device drivers.

### 3. When you are in the Extend mode and playing back video clips, only one video clip is visible.

When in the Extend mode, only one video playback application can be used at a time. If multiple video clips are played back, only one video clip is visible to the user. This also applies to Web pages with embedded video clips. To view these Web pages, move one page to the computer screen and the other to the monitor.

### 4. You cannot play back DVD on the monitor but can play it back on your notebook computer display.

Some computers do not support the certified output protection protocol (COPP), and you will not be able to play back the protected DVD on the monitor. To play back the DVD on the monitor, you can connect the monitor to the VGA connector on your notebook computer and extend the display to the monitor.

### 5. You cannot hear anything through your computer speakers or you can not use the audio connectors on the computer.

Your computers default to the USB audio when the port replicator is connected, disabling your notebook computer built-in speakers and audio connectors.

To enable your computer built-in speakers and audio connectors, do the following:

- A. Click L2230x Wide USB Port Replicator Monitor icon in the taskbar notification area. The pop-up menu opens.

- B. Select **Audio**. For Windows XP users, the **Sound and Audio Devices Properties** window opens. For Windows Vista and Windows 7 users, the **Sound window opens**.
- C. Depending on the operating system you are using, do one of the following:

**For the Windows XP operating system:**

- a. Click the **Audio** tab.
- b. Select a built-in audio device from the **Sound playback** list, and select another built-in audio device from the **Sound Recording** list.

**For the Windows Vista or Windows 7 operating system:**

Click the **Playback** tab, and select a built-in audio device. Then, click the **Sound Recording** tab, and select another built-in audio device.

Notes:

- (1) To apply the new settings, close the application currently using the audio device and restart it.
- (2) The settings you have adjusted will remain until you make changes to them next time.

---

## Chapter 5. Read me

This supplement provides additional hints and tips to assist you if you experience any problems with L2230x Wide USB Port Replicator Monitor (hereafter called port replicator).

- The Ethernet driver of the port replicator cannot be installed on a computer with a Microsoft<sup>®</sup> Windows<sup>®</sup> XP Service Pack 2 (SP2) operating system. If you are using the Windows XP SP2 operating system, the Ethernet driver of the port replicator cannot be installed successfully. A yellow exclamation mark displays before the **USB Ethernet Device** option, which is the name of the port replicator detected by your system, in the Computer Management window.

This has been resolved in the Microsoft Windows XP Service Pack 3 (SP3) and Microsoft Windows Vista<sup>®</sup> operating systems. To resolve the problem, you can download two patches from the Microsoft official Web site and install the patches to upgrade Windows XP SP2.

Reference links are:

- <http://support.microsoft.com/kb/901122/>
- <http://support.microsoft.com/kb/890927/>

To view the port replicator in the Computer Management window, do the following:

1. Right-click the **My Computer** icon on your desktop.
  2. Click **Manage**. The Computer Management window opens.
  3. Click **Device Manager** in the left pane. All hardware devices installed on your computer display.
  4. Expand the **Network adapters** category. The USB Ethernet Device option displays.
- Do not install the port replicator and the other USB-video driver on the same computer with a switchable graphics system. Other USB-video driver may conflict with the port replicator on the computer equipped with a switchable graphics system. It is strongly recommended that you uninstall Other USB-Video driver from driver your system.
  - Using the extend mode to play back DVD on the external monitor is not supported in the Windows XP operating system.
  - When you play back video with WinDVD and Windows Media<sup>®</sup> Player, manually enabling the audio connectors on the port replicator is required if you reconnect the port replicator to your computer and want to use the audio connectors on the port replicator again.
  - If it is the first time you have uninstalled the driver of the port replicator from the Windows Vista<sup>®</sup> operating system, you might be prompted with an error message saying that the Windows Explorer has stopped working. Restart your computer. The error message will disappear.

---

## Appendix A. Service and Support

The following information describes the technical support that is available for your product, during the warranty period or throughout the life of your product. Refer to the Lenovo Limited Warranty for a full explanation of Lenovo warranty terms.

---

### Registering your option

Register to receive product service and support updates, as well as free and discounted computer accessories and content. Go to:

<http://www.lenovo.com/register>

---

### Online technical support

Online technical support is available during the lifetime of a product at:

<http://www.lenovo.com/support>

Product replacement assistance or exchange of defective components also is available during the warranty period. In addition, if your option is installed in a Lenovo computer, you might be entitled to service at your location. A Lenovo technical support representative can help you determine the best alternative.

---

### Telephone technical support

Installation and configuration support through the Customer Support Center will be available until 90 days after the option has been withdrawn from marketing. After that time, the support is cancelled, or made available for a fee, at Lenovo's discretion. Additional support is also available for a nominal fee.

Before contacting a Lenovo technical support representative, please have the following information available: option name and number, proof of purchase, computer manufacturer, model, serial number and manual, the exact wording of any error message, description of the problem, and the hardware and software configuration information for your system.

Your technical support representative might want to walk you through the problem while you are at your computer during the call.

Telephone numbers are subject to change without notice. The most up-to-date telephone list for Lenovo Support is always available at:

<http://www.lenovo.com/support/phone>

| Country or Region | Telephone Number  |
|-------------------|---|
| Africa            | Africa: +44 (0)1475-555-055<br>South Africa: +27-11-3028888 and 0800110756<br>Central Africa: Contact the nearest Lenovo Business Partner |
| Argentina         | 0800-666-0011 (Spanish)   |
| Australia         | 131-426 (English)   |
| Austria           | Warranty service and support: 01-211-454-610 (German)   |
| Belgium           | Warranty service and support: 02-225-3611 (Dutch, French)   |
| Bolivia           | 0800-10-0189 (Spanish)  |



| Country or Region           | Telephone Number   |
|-----------------------------|--|
| Brazil                      | Sao Paulo region: (11) 3889-8986<br>Outside Sao Paulo region: 0800-701-4815<br>(Brazilian Portuguese)                      |
| Brunei                      | 801-1041 (English, Bahasa Melayu)  |
| Canada                      | Toronto: 416-383-3344<br>Outside Toronto: 1-800-565-3344<br>(English, French)  |
| Chile                       | Toll Free: 188-800-442-488<br>800-361-213<br>(Spanish)   |
| China                       | 86-10-58851110<br>800-990-8888<br>(Mandarin)   |
| China<br>(Hong Kong S.A.R.) | ThinkCentre® Commercial PC: 8205-0333<br>Multimedia Home PC: 800-938-228<br>(Cantonese, English, Mandarin)                 |
| China<br>(Macau S.A.R.)     | ThinkCentre Commercial PC: 795-9892<br>Multimedia Home PC: 0800-336<br>(Cantonese, English, Mandarin)                      |
| Colombia                    | 1-800-912-3021 (Spanish)   |
| Costa Rica                  | 0-800-011-1029 (Spanish)   |
| Croatia                     | 0800-0426  |
| Cyprus                      | +357-22-841100   |
| Czech Republic              | +420-2-7213-1316   |
| Denmark                     | Warranty service and support: 7010-5150 (Danish)   |
| Dominican Republic          | 1-866-434-2080 (Spanish)   |
| Ecuador                     | 1-800-426911 (Spanish)   |
| Egypt                       | +202-35362525  |
| El Salvador                 | 800-6264 (Spanish)   |
| Estonia                     | +372 6776793<br>+372 66 00 800   |
| Finland                     | Warranty service and support: +358-800-1-4260 (Finnish)  |
| France                      | Warranty service and support (hardware): 0810-631-213<br>Warranty service and support (software): 0810-631-020<br>(French) |
| Germany                     | Warranty service and support: 01805-00-46-18 (German)  |
| Greece                      | +30-210-680-1700   |
| Guatemala                   | 1800-624-0051 (Spanish)  |
| Honduras                    | Tegucigalpa: 232-4222<br>San Pedro Sula: 552-2234<br>(Spanish)   |
| Hungary                     | +36-1-382-5716<br>+36-1-382-5720<br>(English, Hungarian)   |
| India                       | 1800-425-2666<br>+91-80-2535-9182<br>(English)   |

| Country or Region | Telephone Number  |
|-------------------|---|
| Indonesia         | 021 5238 823<br>Local number only: 001-803-606-282<br>DID (Direct Inward Dialing): +603 8315 6859<br>(English, Bahasa Indonesia)  |
| Ireland           | Warranty service and support: 01-881-1444 (English)   |
| Israel            | Givat Shmuel Service Center: +972-3-531-3900<br>(Hebrew, English)   |
| Italy             | Warranty service and support: +39-800-820094 (Italian)  |
| Japan             | Toll Free: 0120-20-5550<br>International: +81-46-266-4716<br><br>The above numbers will be answered with a Japanese language voice prompt. For telephone support in English, please wait for the Japanese voice prompt to end, and an operator will answer. Please say "English support please," and your call will be transferred to an English-speaking operator.<br><br>PC software: 0120-558-695<br>Overseas calls: +81-44-200-8666<br>(Japanese) |
| Korea             | 1588-6782 (Korean)  |
| Latvia            | +371 7070360  |
| Lithuania         | +370 5 278 66 00  |
| Luxembourg        | +352-360-385-343 (French)   |
| Malaysia          | Local number only: 1800-88-1889<br>DID: +603 8315 6855<br>(English, Bahasa Melayu)  |
| Malta             | +35621445566  |
| Mexico            | 001-866-434-2080 (Spanish)  |
| Middle East       | +44 (0)1475-555-055   |
| Netherlands       | +31-20-514-5770 (Dutch)   |
| New Zealand       | 0800-733-222 (English)  |
| Nicaragua         | 001-800-220-1830 (Spanish)  |
| Norway            | Warranty service and support: 8152-1550 (Norwegian)   |
| Panama            | Lenovo Customer Support Center: 001-866-434-2080 (Toll Free)<br>206-6047<br>(Spanish)   |
| Peru              | 0-800-50-866 (Spanish)  |
| Philippines       | 1800-1601-0033 (English, Filipino)  |
| Poland            | +48-22-878-6999 (Polski)  |
| Portugal          | +351-21-892-7046 (Portuguese)   |
| Romania           | +4-021-224-4015   |
| Russia            | Moscow: +7-(495)-258-6300<br>Toll Free: +8-800-200-6300<br>(Russian)  |
| Singapore         | Local number only: 800-6011-343<br>DID: +603 8315 6859 (English)  |
| Slovakia          | +421-2-4954-5555  |

| <b>Country or Region</b> | <b>Telephone Number</b>   |
|--------------------------|---|
| Slovenia                 | +386-1-200-50-60 (Slovenian)  |
| Spain                    | 91-714-7983<br>0901-100-000<br>(Spanish)  |
| Sri Lanka                | +9411 2493547<br>+9411 2493548<br>(English)   |
| Sweden                   | Warranty service and support: 077-117-1040 (Swedish)  |
| Switzerland              | Warranty service and support: 0800-55-54-54<br>(German, French, Italian)  |
| Taiwan                   | 886-2-8723-9799<br>0800-000-700<br>(Mandarin)   |
| Thailand                 | Local number only: 1-800-060-066<br>66 2273 4088<br>DID: +603 8315 6857 (Thai, English)   |
| Turkey                   | 00800-4463-2041 (Turkish)   |
| United Kingdom           | Standard warranty support: 08705-500-900 (English)  |
| United States            | 1-800-426-7378 (English)  |
| Uruguay                  | 000-411-005-6649 (Spanish)  |
| Venezuela                | 0-800-100-2011 (Spanish)  |
| Vietnam                  | For Northern Area and Hanoi City:<br>844 3 946 2000 or 844 3 942 6457<br>For Southern Area and Ho Chi Minh City:<br>848 3 829 5160 or 844 3 942 6457<br>(Vietnamese, English) |

---

## Appendix B. Notices

Lenovo may not offer the products, services, or features discussed in this document in all countries. Consult your local Lenovo representative for information on the products and services currently available in your area. Any reference to a Lenovo product, program, or service is not intended to state or imply that only that Lenovo product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any Lenovo intellectual property right may be used instead. However, it is the user's responsibility to evaluate and verify the operation of any other product, program, or service.

Lenovo may have patents or pending patent applications covering subject matter described in this document. The furnishing of this document does not give you any license to these patents. You can send license inquiries, in writing, to:

*Lenovo (United States), Inc.  
1009 Think Place - Building One  
Morrisville, NC 27560  
U.S.A.  
Attention: Lenovo Director of Licensing*

LENOVO PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some jurisdictions do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

This information could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. Lenovo may make improvements and/or changes in the product(s) and/or the program(s) described in this publication at any time without notice.

The products described in this document are not intended for use in implantation or other life support applications where malfunction may result in injury or death to persons. The information contained in this document does not affect or change Lenovo product specifications or warranties. Nothing in this document shall operate as an express or implied license or indemnity under the intellectual property rights of Lenovo or third parties. All information contained in this document was obtained in specific environments and is presented as an illustration. The result obtained in other operating environments may vary.

Lenovo may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

Any references in this publication to non-Lenovo Web sites are provided for convenience only and do not in any manner serve as an endorsement of those Web sites. The materials at those Web sites are not part of the materials for this Lenovo product, and use of those Web sites is at your own risk.

Any performance data contained herein was determined in a controlled environment. Therefore, the result obtained in other operating environments may vary significantly. Some measurements may have been made on development-level systems and there is no guarantee that these measurements will be the same on generally available systems. Furthermore, some measurements may have been estimated through extrapolation. Actual results may vary. Users of this document should verify the applicable data for their specific environment.

---

## Recycling information

Lenovo encourages owners of information technology (IT) equipment to responsibly recycle their equipment when it is no longer needed. Lenovo offers a variety of programs and services to assist equipment owners in recycling their IT products. For information on recycling Lenovo products, go to: <http://www.lenovo.com/lenovo/environment/recycling>

### 環境配慮に関して

#### 本機器またはモニターの回収リサイクルについて

企業のお客様が、本機器が使用済みとなり廃棄される場合は、資源有効利用促進法の規定により、産業廃棄物として、地域を管轄する県知事あるいは、政令市長の許可を持った産業廃棄物処理業者に適正処理を委託する必要があります。また、弊社では資源有効利用促進法に基づき使用済みパソコンの回収および再利用・再資源化を行う「PC回収リサイクル・サービス」を提供しています。詳細は、<http://www.ibm.com/jp/pc/service/recycle/pcrecycle/> をご参照ください。

また、同法により、家庭で使用済みとなったパソコンのメーカー等による回収再資源化が2003年10月1日よりスタートしました。詳細は、<http://www.ibm.com/jp/pc/service/recycle/pcrecycle/> をご参照ください。

#### 重金属を含む内部部品の廃棄処理について

本機器のプリント基板等には微量の重金属（鉛など）が使用されています。使用後は適切な処理を行うため、上記「本機器またはモニターの回収リサイクルについて」に従って廃棄してください。

### Collecting and recycling a disused Lenovo computer or monitor

If you are a company employee and need to dispose of a Lenovo computer or monitor that is the property of the company, you must do so in accordance with the Law for Promotion of Effective Utilization of Resources. Computers and monitors are categorized as industrial waste and should be properly disposed of by an industrial waste disposal contractor certified by a local government. In accordance with the Law for Promotion of Effective Utilization of Resources, Lenovo Japan provides, through its PC Collecting and Recycling Services, for the collecting, reuse, and recycling of disused computers and monitors. For details, visit the Lenovo Web site at [www.ibm.com/jp/pc/service/recycle/pcrecycle/](http://www.ibm.com/jp/pc/service/recycle/pcrecycle/). Pursuant to the Law for Promotion of Effective Utilization of Resources, the collecting and recycling of home-used computers and monitors by the manufacturer was begun on October 1, 2003. This service is provided free of charge for home-used computers sold after October 1, 2003. For details, visit the Lenovo Web site at [www.ibm.com/jp/pc/service/recycle/personal/](http://www.ibm.com/jp/pc/service/recycle/personal/).

### Disposing of Lenovo computer components

Some Lenovo computer products sold in Japan may have components that contain heavy metals or other environmental sensitive substances. To properly dispose of disused components, such as a printed circuit board or drive, use the methods described above for collecting and recycling a disused computer or monitor.

---

## Trademarks

The following terms are trademarks of Lenovo in the United States, other countries, or both:

Lenovo  
Lenovo logo  
ThinkPad

ENERGY STAR and the ENERGY STAR logo are registered US trademarks.

Microsoft and Windows are trademarks of Microsoft Corporation in the United States, other countries, or both.

Other company, product, or service names may be trademarks or service marks of others.